


Instructions for downloading and installing WinRFCalc

Date: Sunday, 12 March 2023

Step 1 [Starting the Free Trial version after installation]


- Download the latest version from : <https://rfcalculator.com/Download/>
- After downloading the package from the Website, start the installer.
- First you will see the following on your screen.

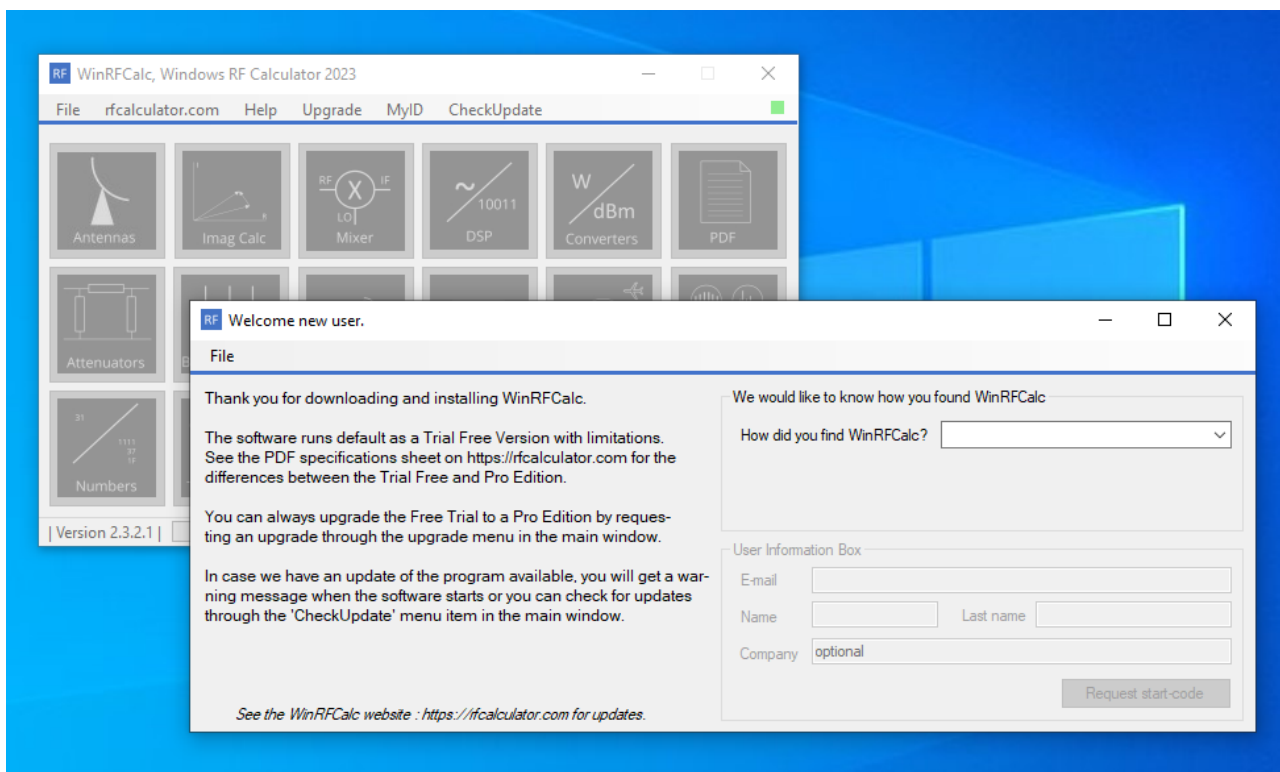


The main calculator window is not enabled, and you start with the Welcome New User screen.

1. Select how you have found WinRFCalc in the group-box on top
2. Provide your details. We need the e-mail address to return a start-up code to you
3. Without this start-code WinRFCalc will not run!


See the next page for a completed form, and the response after clicking 'Request Start code'

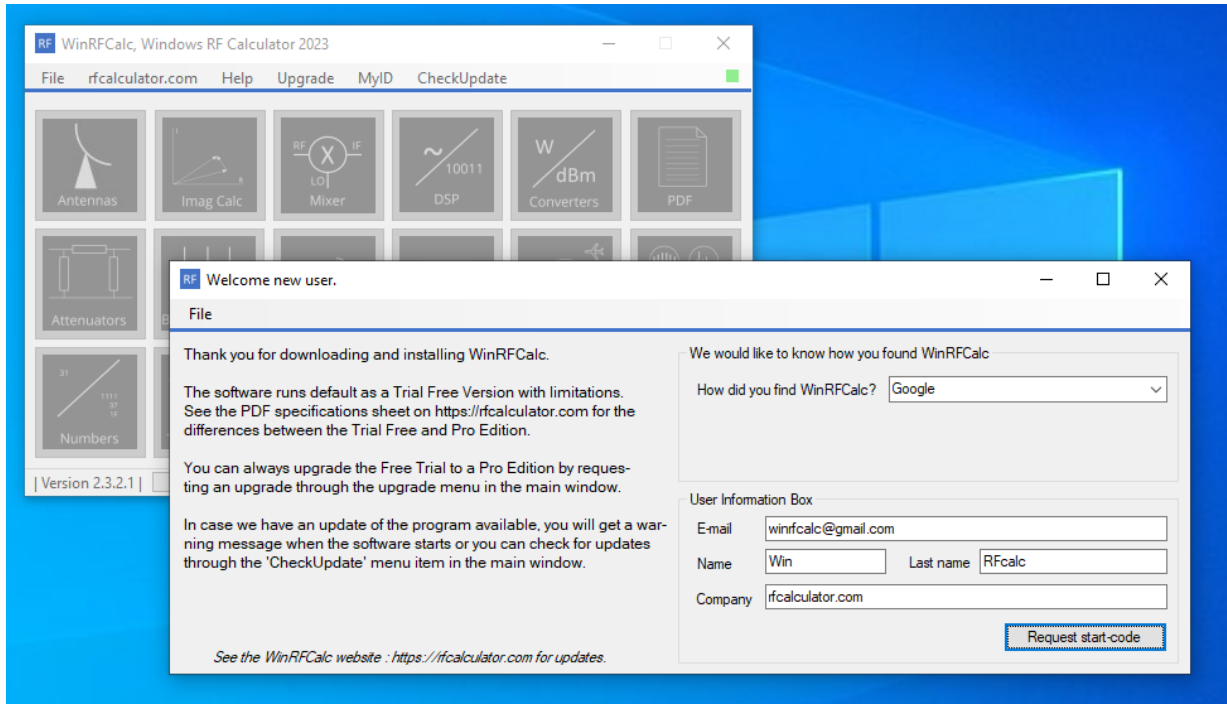

4. After all fields have been filled in, click the OK button.
5. A new window opens with the contact page of RFcalculator.com pre-loaded with the information you have provided in the welcome Win screen. See the screen copy below.
6. Check the privacy check-box and click send.

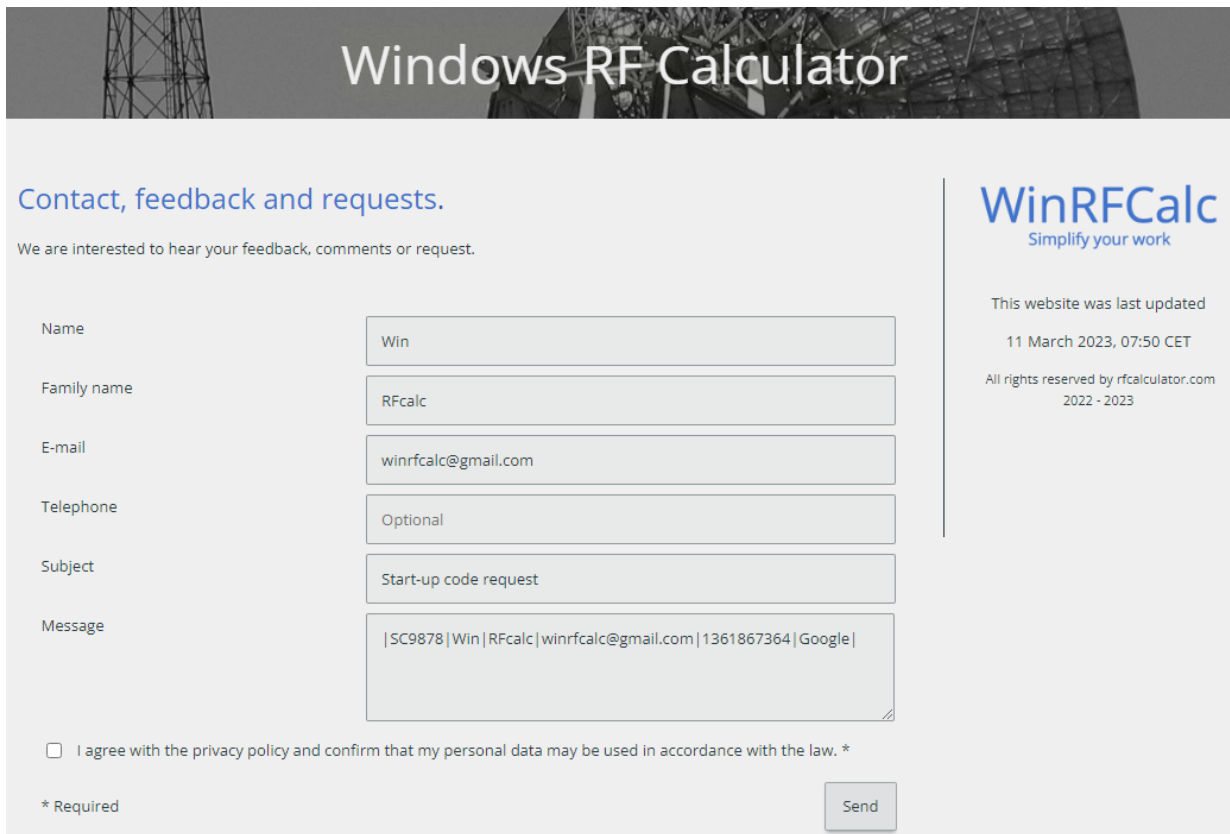

After we have received your start-up request, we will return Start-Up code on the e-mail address you have provided. This code is requested at start-up, and after entry WinRFCalc will run in the Free Trial mode.



Windows RF Calculator

Contact, feedback and requests.

Thanks for your message or request, we will reply to you as soon as possible. You can close this window now.


After closing this browser, the WinRFCalc welcome window will close automatically.

WinRFCalc
Simplify your work

This website was last updated
11 March 2023, 07:50 CET

All rights reserved by rfcalculator.com
2022 - 2023


Start-up code ✕

 The start-up code is missing. Do you have a code?

Start-up code entry ✕

Please enter the start-up code

After entry of the start-up code, you can work with the Free Trial edition with limited capabilities.

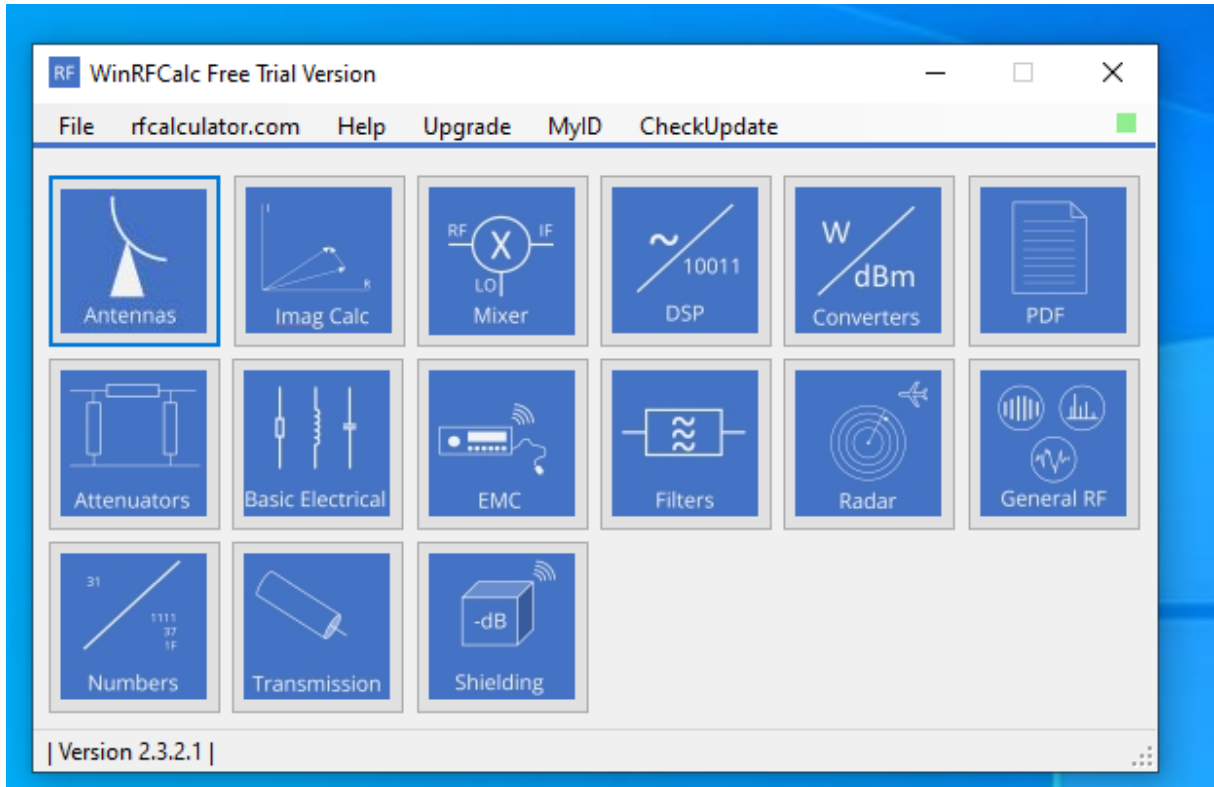

When you click on MyID the User ID information window pops up.

